

Encoding operating and display unit-E87-  
Code table from part No. index "J" onwards

Code		Significance	
00		Fillers, no assignment1)	
	0	Rest of World (RoW), except USA and Japan	
	1	USA	
	2	Japan	
	6	6-cylinder engine	
	8	8-cylinder engine 12-cylinder engine	
		0	LHD with petrol engine
		1	RHD with petrol engine
		3	LHD with TDI engine
		4	RHD with TDI engine

1) If the control unit is encoded with "01" instead of "00", deactivation of the compressor in air recirculation mode occurs at approx. + 2 °C and not at approx. - 5 °C.

Example codes

00060	RoW 6-cyl. LHD with petrol engine
00063	RoW 6-cyl. LHD with TDI engine