

Removing and installing thermostat

Removing

- Drain off coolant → [Chapter](#).
- Remove intake manifold (top section) → [Rep. Gr.24](#).
- Remove coolant pipe (front) → [Chapter](#).

**Note**

Place a cloth underneath to catch any escaping coolant.

- Remove bolts -arrows-.
- Detach thermostat with hose connection.

Installing

- Tightening torque → [Chapter](#)

Installation is carried out in the reverse order; note the following:

**Note**

Renew seals and/or gaskets.

- Install coolant pipe (front) → [Chapter](#).
- Install intake manifold (top section) → [Rep. Gr.24](#).
- Fill cooling system → [Anchor](#).

