


Removing and installing

Remove front bumper cover → **General body repairs, exterior; Rep. Gr.63.**

- Remove the air duct -C- and (depending on the vehicle model) the mount for the bumper cover -A- → **General body repairs, exterior; Rep. Gr.63.**

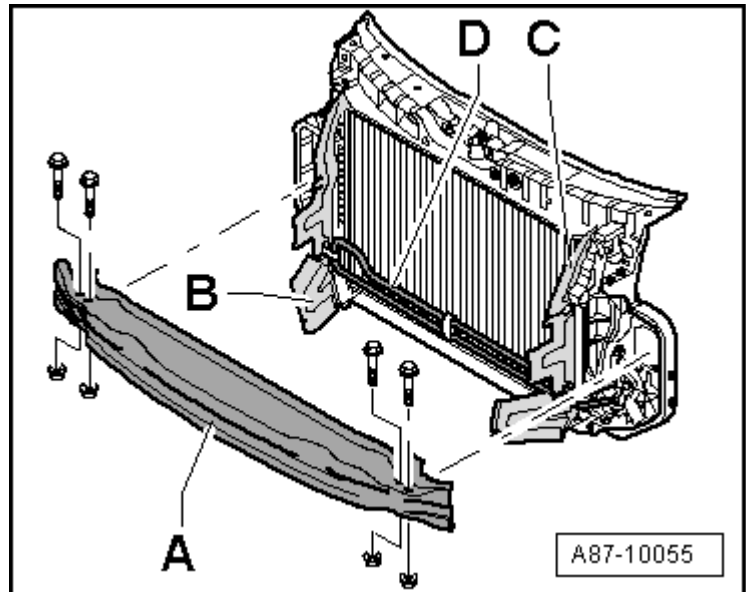

- Unplug connector -A- from refrigerant pressure/temperature sender -G395--B-.
- Remove refrigerant pressure/temperature sender -G395--B- (housing colour "Grey"), tightening torque: 8 Nm.



Note

Refrigerant pressure/temperature senders - G395- with a black housing may also still be fitted at the start of production. Attention is therefore to be paid to the part number on the component (risk of interchange with the high-pressure sender -G65-) → **Electronic parts catalogue.**

- Replace the O-ring -C- → **Chapter** (for assignment, refer to → **Electronic parts catalogue**).

