


Overview of parking aid

1 - Parking aid senders

- ❑ In front bumper
- ❑ Only for 8-channel parking aid
- ❑ Removing and installing → Chapter

2 - Parking aid button - E266-

- ❑ Only for 8-channel parking aid
- ❑ With parking aid switch illumination bulb -L117-
- ❑ With integrated parking aid warning lamp -K136-
- ❑ Fitting location → Fig.

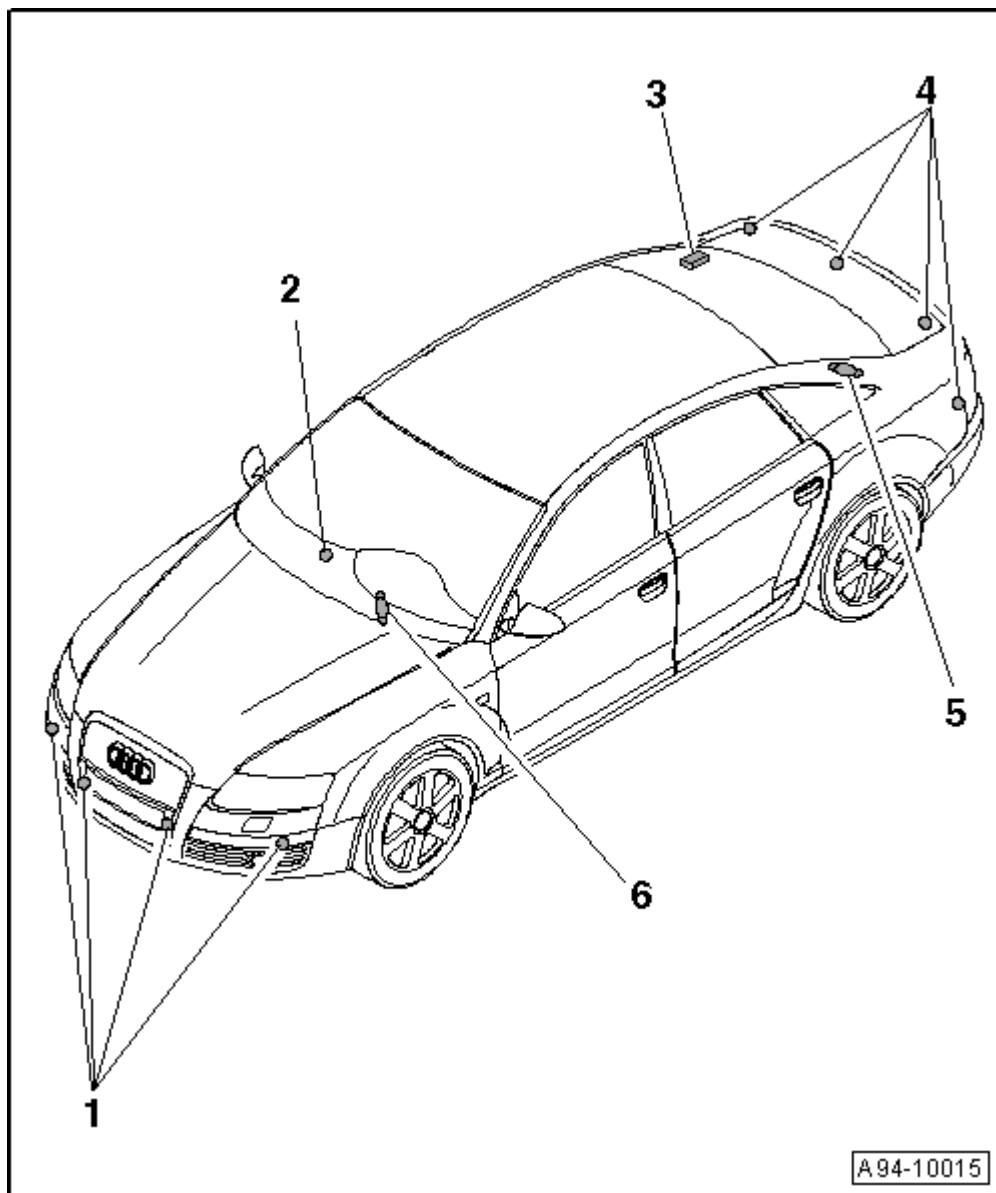

3 - Parking aid control unit -J446-

Saloon:

- ❑ In luggage compartment (rear right) at wheel housing
- ❑ Removing and installing → Chapter

Avant:

- ❑ At rear right of luggage compartment in dirt tray
- ❑ Removing and installing → Chapter

4 - Parking aid senders

- ❑ In rear bumper
- ❑ Removing and installing → Chapter

5 - Rear parking aid warning buzzer -H15-

- ❑ On belt guide

Saloon:

- ❑ Removing and installing: vehicles up to model year 2006 → [Chapter](#); vehicles from model year 2007 onwards → [Chapter](#)

Avant:

- ❑ Removing and installing: vehicles up to model year 2005 → [Chapter](#); vehicles from model year 2006 onwards → [Chapter](#)

6 - Front parking aid warning buzzer -H22-

- ❑ Only for 8-channel parking aid
- ❑ Behind driver's side storage compartment
- ❑ Removing and installing → [Chapter](#)

Fitting location for parking aid button - E266-

- ◆ In centre console switch unit -arrow-
- ◆ Removing and installing → [Chapter](#).

