


## Removing and installing seat bench

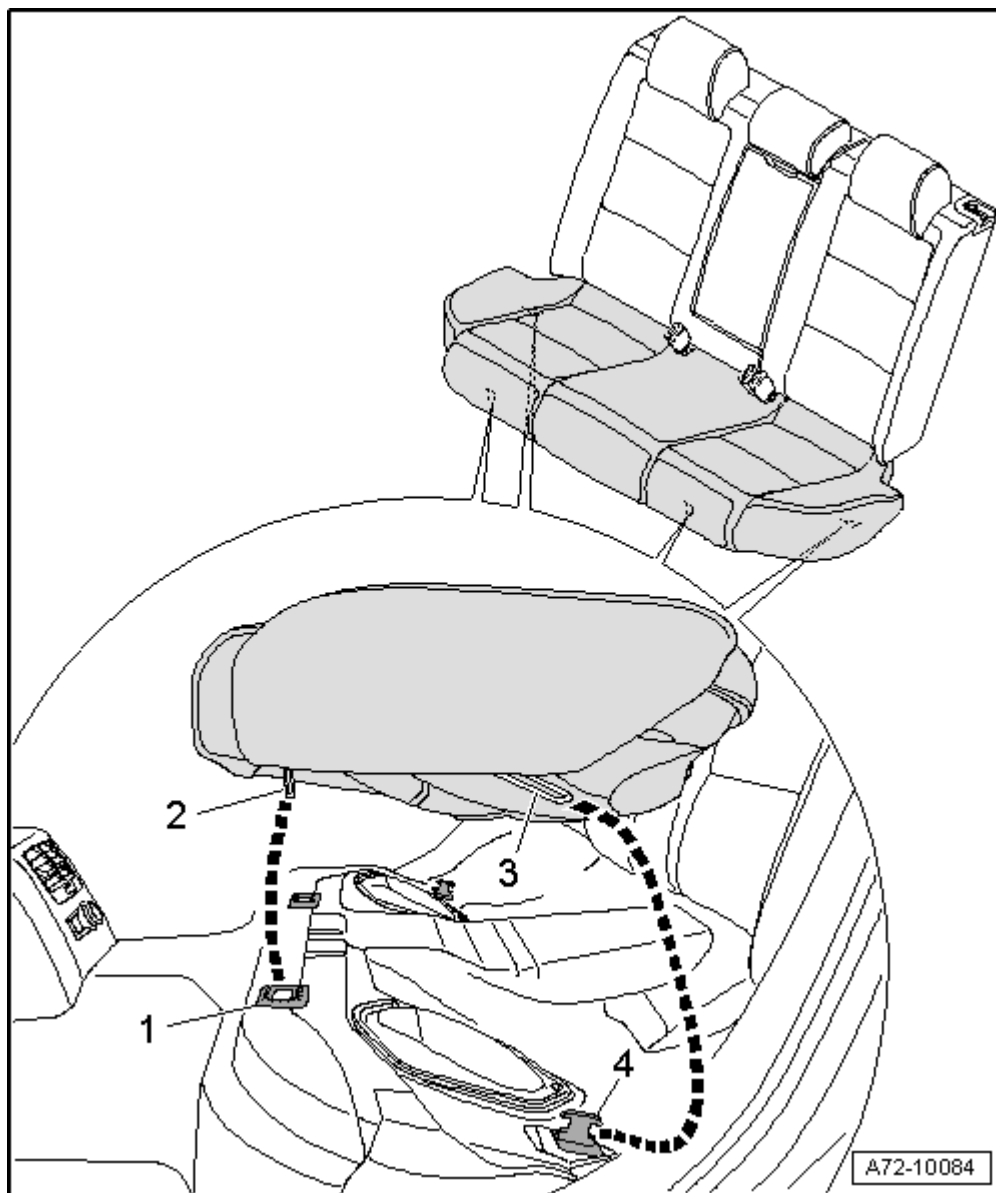

### Removing

- Pull front edge of seat bench out of retainers -1- (left and right).
- Disengage seat bench from retainers -4- (left and right) by pushing it firmly towards the rear.
- On vehicles with seat heating, raise the seat bench high enough to be able to unplug the electrical connectors.
- Take electrical connector for side airbag out of groove → Fig..
- Take seat bench out of vehicle.

### Installing

Install in reverse order of removal; note the following:




#### Caution

***The retainers must be renewed whenever you have removed the rear seat bench → Fig..***

## Connector for side airbag

**WARNING**

*On vehicles with side airbags please observe relevant safety regulations  
→ **Chapter**.*

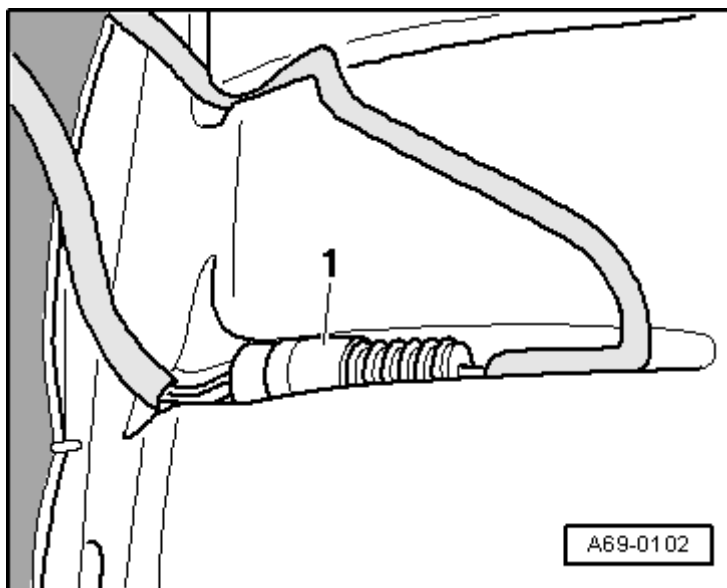

## Renewing retainers

- Remove used retainer from body cut-out.
- Fit new retainer -2- in body opening -1- and push it in until you hear it engage.

