

Removing and installing roof aerial -R216-, Avant


- Switch off all electrical equipment.
- Remove ignition key.

Removing


- Remove roof end trim → General body repairs, interior; Rep. Gr.70.
- Unplug connectors in retainers -2- and -4-.
- Unscrew nut -3- (6 Nm) and unclip aerial wiring.
- Lift roof aerial -R216- off roof.

Installing

- Guide in aerial wiring and carefully fit roof aerial -R216- onto roof.

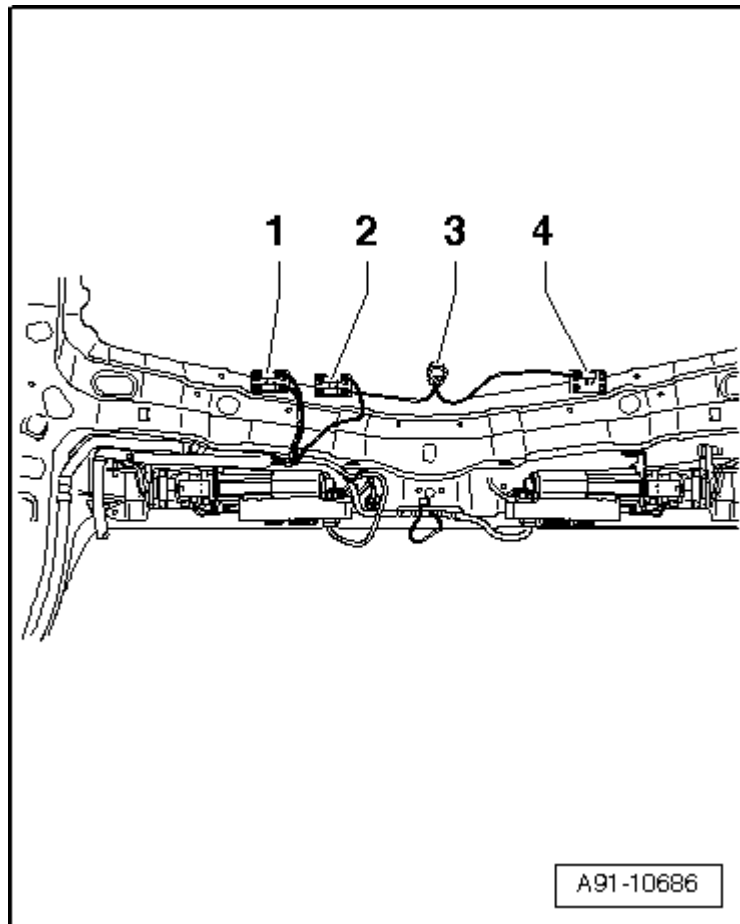

- Make sure that the aerial wiring -3- is fitted in the grooves -arrows- on the aerial base and securing nut -2- so that it does not become pinched or crimped.
- Tighten nut evenly to 6 Nm.

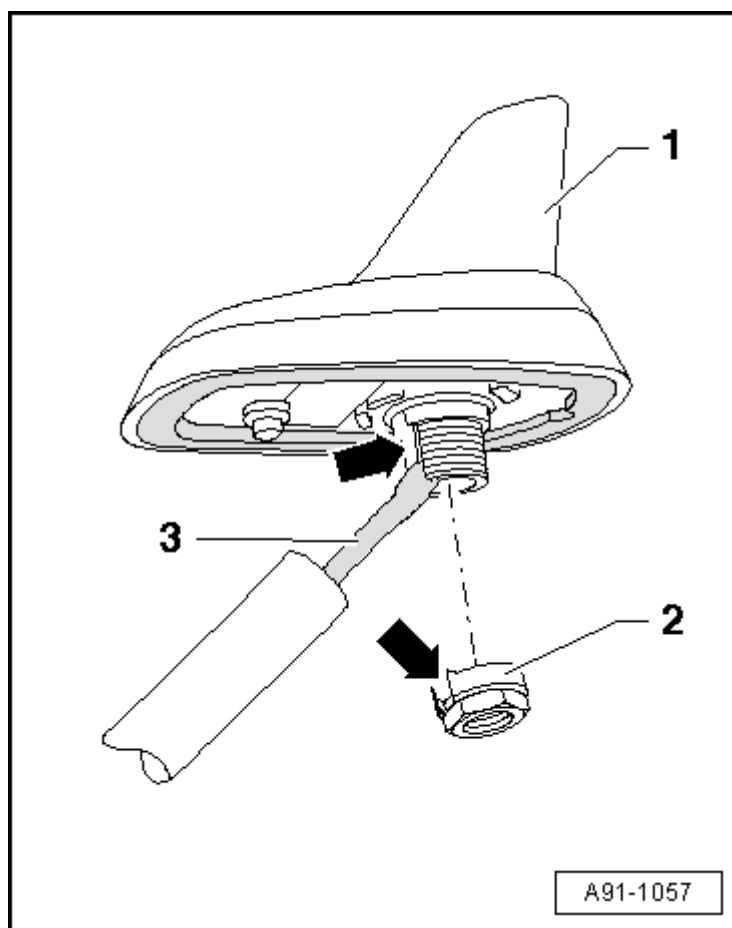

- Make sure that the roof aerial -R216- is fitted evenly on the roof.
- Secure aerial wiring and clip aerial wiring into retainers -2- and -4-.
- Plug in connectors.
- Perform further installation in reverse sequence.

