

Removing

- Switch off ignition.
- Remove driver's storage compartment → **General body repairs, interior; Rep. Gr.70**
- Mark connector -C- to control motor (to prevent interchange with other identical connectors).
- Unplug connector -C- from central vents control motor -V102-.
- Remove bolts -A- (tightening torque 10 Ncm).
- Use a screwdriver to carefully prise connecting element -D- off control motor -B- and remove control motor.



Note

- ◆ *If, on vehicles with air conditioner of "Convenience" type, indirect ventilation flap control motor -V213- is so awkwardly positioned that connecting elements -E- impede control motor removal, then these must be removed → **Chapter**.*
- ◆ *Leave the connecting element -D- to the flap shaft in position at the air conditioner unit.*
- ◆ *Removing connecting element to shaft of flap -D- → **Chapter***

