

Audi A6

Current Flow Diagram

No. 133 / 1

Edition 09.2009

Headlight for gaseous discharge light (Bixenon) and automatic headlight range control

from September 2008

Notes:

For information concerning

- ◆ Position of relays and fuses
- ◆ Multi-pin connections
- ◆ Control units and relays
- ◆ Earth connections

→ List of Fitting Locations!

For information concerning


- ◆ Fault Finding Programs

→ guided fault finding

Audi A6

Current Flow Diagram

No. 133 / 2

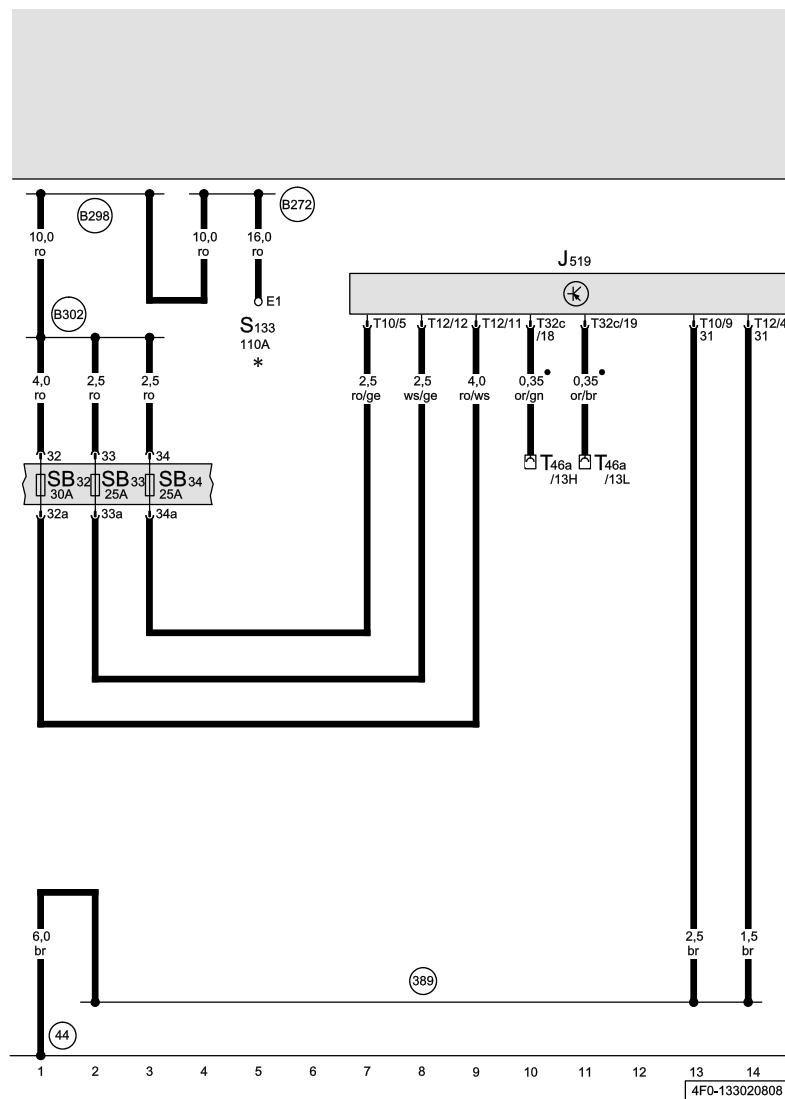

Onboard power supply control unit, fuses


- J519 - Onboard supply control unit
- S133 - Fuse 3
- SB32 - Fuse 32 on fuse holder
- SB33 - Fuse 33 on fuse holder
- SB34 - Fuse 34 on fuse holder
- T10 - 10-pin connector, black, connector A, on onboard power supply control unit
- T12 - 12-pin connector, black, connector B, on onboard power supply control unit
- T32c - 32-pin connector, white, connector C, on onboard supply control unit
- T46a - 46-pin connector, CAN disconnecter left
- 44 - Earth point, lower part of left A-pillar
- 389 - Earth connection 24, in main wiring harness
- B272 - Positive connection (30), in main wiring harness
- B298 - Positive connection 2 (30), in main wiring harness
- B302 - Positive connection 6 (30), in main wiring harness
- - CAN bus (data wire)
- * - main fuse box, in luggage compartment, rear right, on the battery

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

Audi A6

Current Flow Diagram

No. 133 / 3

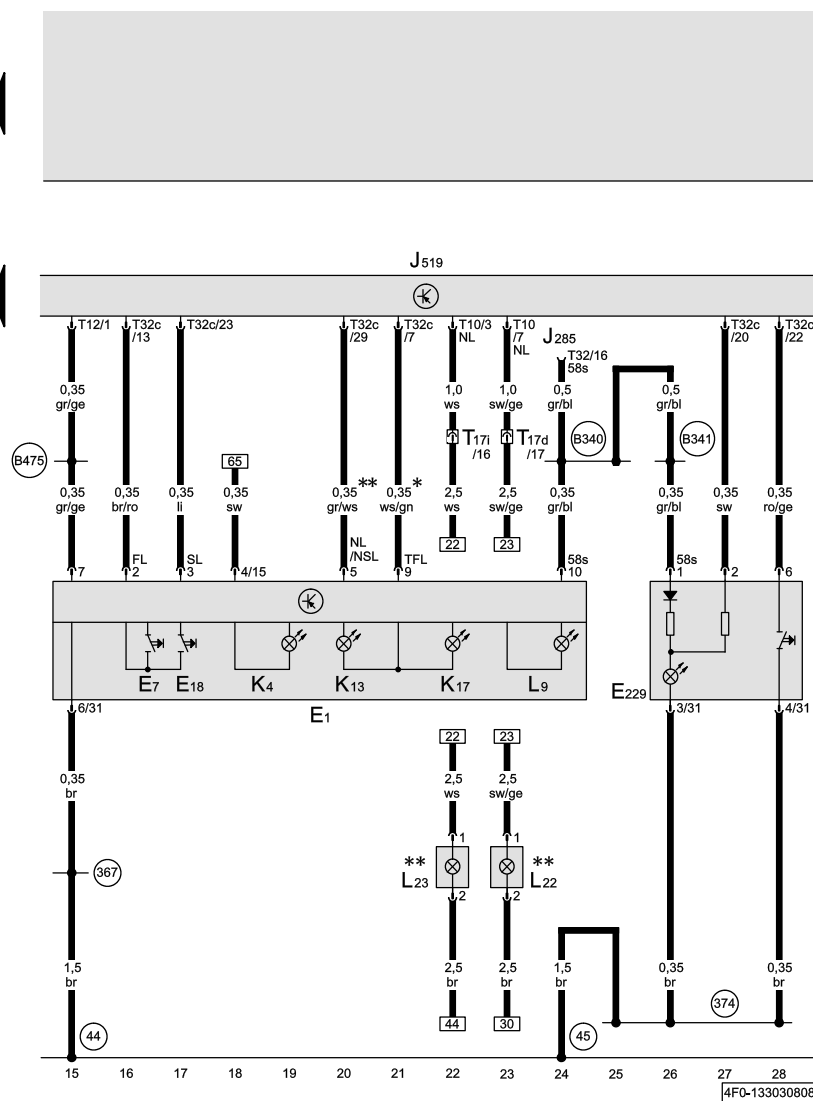

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink


Light switch, hazard warning lights button, left and right fog light bulb

- E1 - Light switch
- E7 - Fog light switch
- E18 - Rear fog light switch
- E229 - Hazard warning lights button
- J285 - Control unit in dash panel insert
- J519 - Onboard supply control unit
- K4 - Side light warning lamp
- K13 - Rear fog light warning lamp
- K17 - Fog light warning lamp
- L9 - Light switch illumination bulb
- L22 - Left fog light bulb
- L23 - Right fog light bulb
- T10 - 10-pin connector, black, connector A, on onboard power supply control unit
- T12 - 12-pin connector, black, connector B, on onboard power supply control unit
- T17d - 17-pin connector, black, coupling station on left of A-pillar
- T17i - 17-pin connector, red, coupling station on right of A-pillar
- T32 - 32-pin connector, grey, on dash panel insert
- T32c - 32-pin connector, white, connector C, on onboard supply control unit
- 44 - Earth point, lower part of left A-pillar
- 45 - Earth point, centre behind dash panel
- 367 - Earth connection 2, in main wiring harness
- 374 - Earth connection 9, in main wiring harness
- B340 - Connection 1 (58s), in main wiring harness
- B341 - Connection 2 (58s), in main wiring harness
- B475 - Connection 11, in main wiring harness
- * - models with day driving light
- ** - models with fog light

Audi A6

Current Flow Diagram

No. 133 / 4

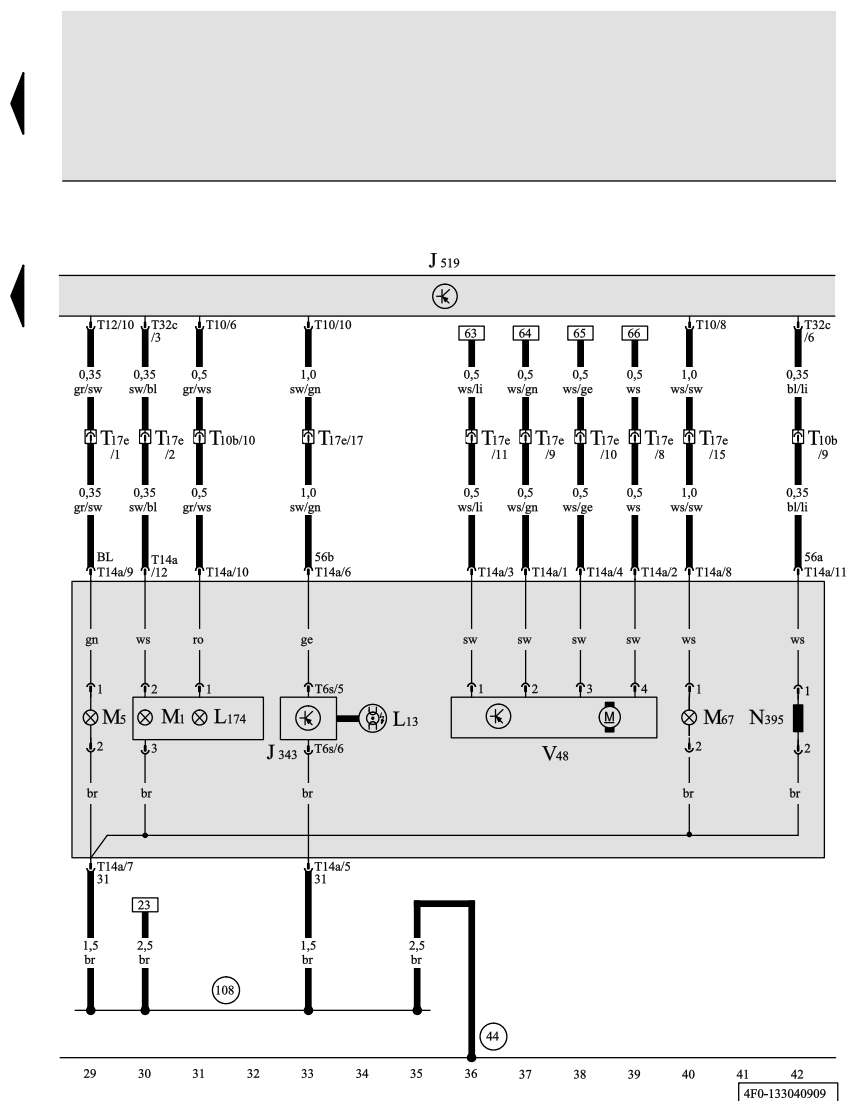

Onboard supply control unit, left gas discharge light control unit


- J343 - Left gas discharge light control unit
- J519 - Onboard supply control unit
- L13 - Left gas discharge (xenon) bulb
- L174 - Left day driving light bulb
- M1 - Left side light bulb
- M5 - Front left turn signal bulb
- M67 - Left additional main beam bulb
- N395 - Left headlight screen adjustment solenoid
- T6s - 6-pin connector, black, on left gas discharge bulb control unit
- T10 - 10-pin connector, black, connector A, on onboard power supply control unit
- T10b - 10-pin connector, blue, coupling station on left of A-pillar
- T12 - 12-pin connector, black, connector B, on onboard power supply control unit
- T14a - 14-pin connector, black, on left of headlight
- T17e - 17-pin connector, red, coupling station on left of A-pillar
- T32c - 32-pin connector, white, connector C, on onboard supply control unit
- V48 - Left headlight range control motor
- 44 - Earth point, lower part of left A-pillar
- 108 - Earth connection 2, in front left wiring harness
- * - models with day driving light

4F0-133040909

Audi A6

Current Flow Diagram

No. 133 / 5

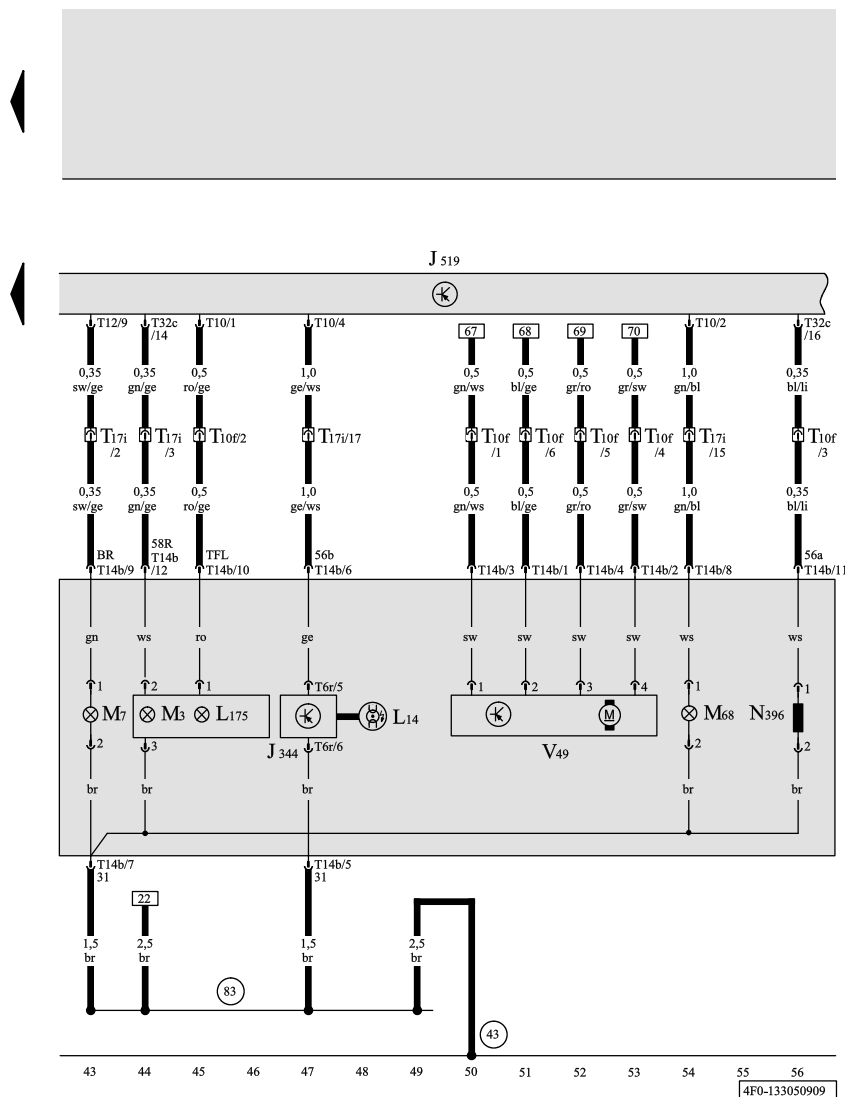

Onboard supply control unit, right gas discharge light control unit

- J344 - Right gas discharge light control unit
- J519 - Onboard supply control unit
- L14 - Right gas discharge (xenon) bulb
- L175 - Right day driving light bulb
- M3 - Right side light bulb
- M7 - Front right turn signal bulb
- M68 - Right additional main beam bulb
- N396 - Right headlight screen adjustment solenoid
- T6r - 6-pin connector, black, on right gas discharge bulb control unit
- T10 - 10-pin connector, black, connector A, on onboard power supply control unit
- T10f - 10-pin connector, white, coupling station on right of A-pillar
- T12 - 12-pin connector, black, connector B, on onboard power supply control unit
- T14b - 14-pin connector, black, on right of headlight
- T17i - 17-pin connector, red, coupling station on right of A-pillar
- T32c - 32-pin connector, white, connector C, on onboard supply control unit
- V49 - Right headlight range control motor
- 43 - Earth point, lower part of right A-pillar
- 83 - Earth connection 1, in front right wiring harness
- * - models with day driving light

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

4F0-133050909

Current Flow Diagram

**Control unit for headlight range control, rear left
vehicle level sender, front left vehicle level sender**



- ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink