


## Removing and installing activated charcoal filter

### Removing


Observe safety precautions → Chapter.

Observe rules for cleanliness → Chapter.


- Remove front wheel (right-side).
- Remove front right wheel housing liner → Rep. Gr.66.
- Remove cover panel -1- from underbody (front right).

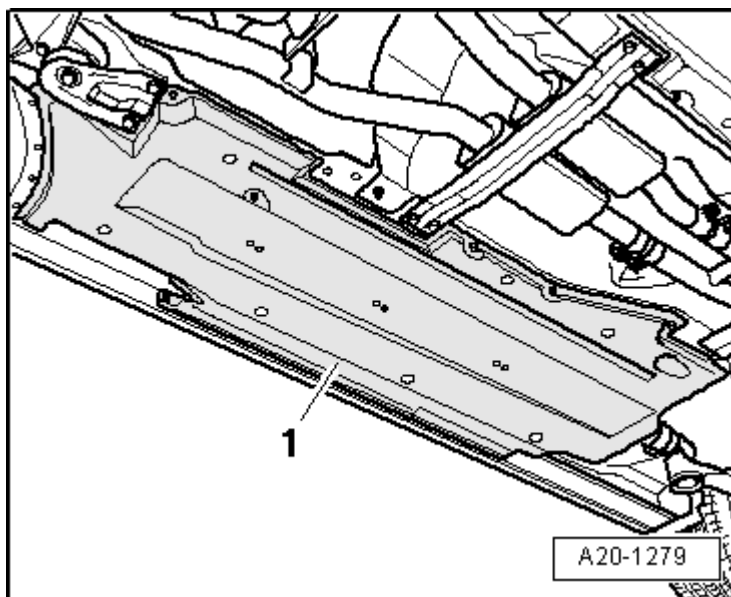

- Disconnect breather pipe -1- leading to fuel tank by pressing release tab.
- Unplug vent pipe -2-.

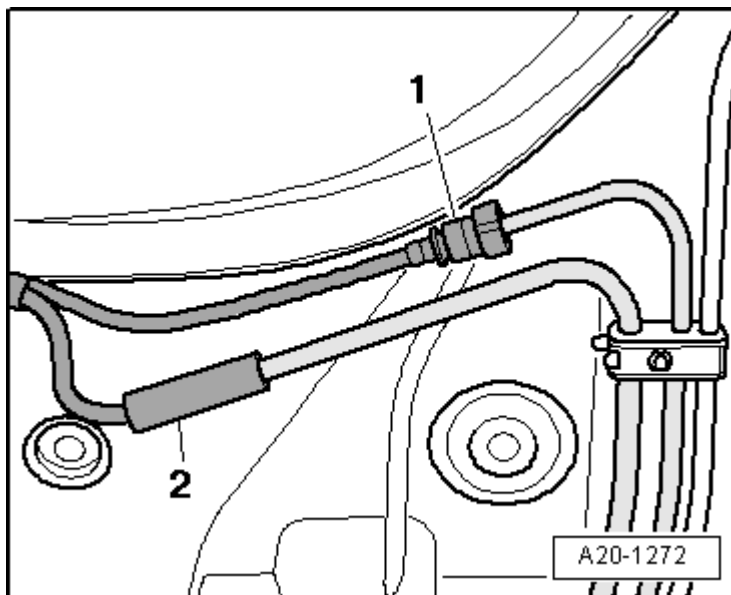

- Disconnect breather pipe -arrow- leading to activated charcoal filter solenoid valve 1 -N80- by pressing release tab.

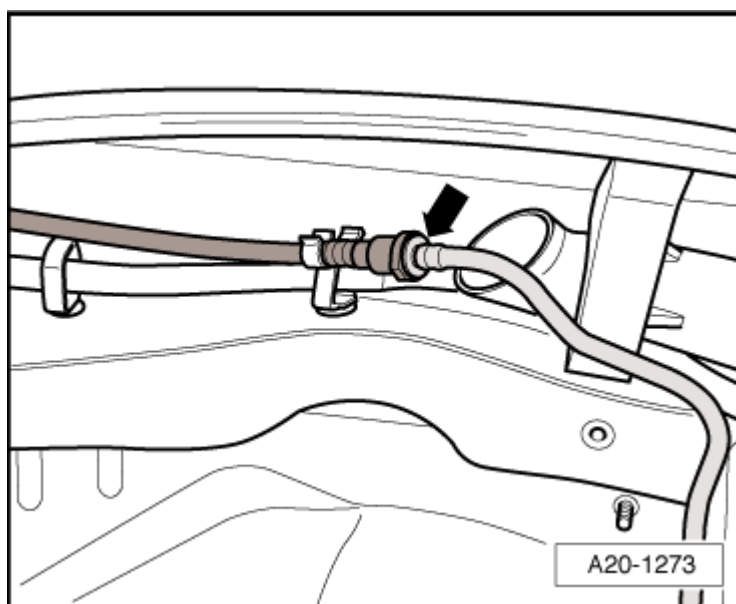

- Unscrew bolt -1- and detach activated charcoal filter at top -arrows-.
- Remove activated charcoal filter with breather pipes.

### Installing

- Tightening torque → [Chapter](#)

Installation is carried out in the reverse order; note the following:

- Install activated charcoal filter at top -arrows-.
- Secure activated charcoal filter to wheel housing.

