



detach arrester -2-.

- When installing, tighten cap nuts -3- on bonnet -1- to 11 Nm.

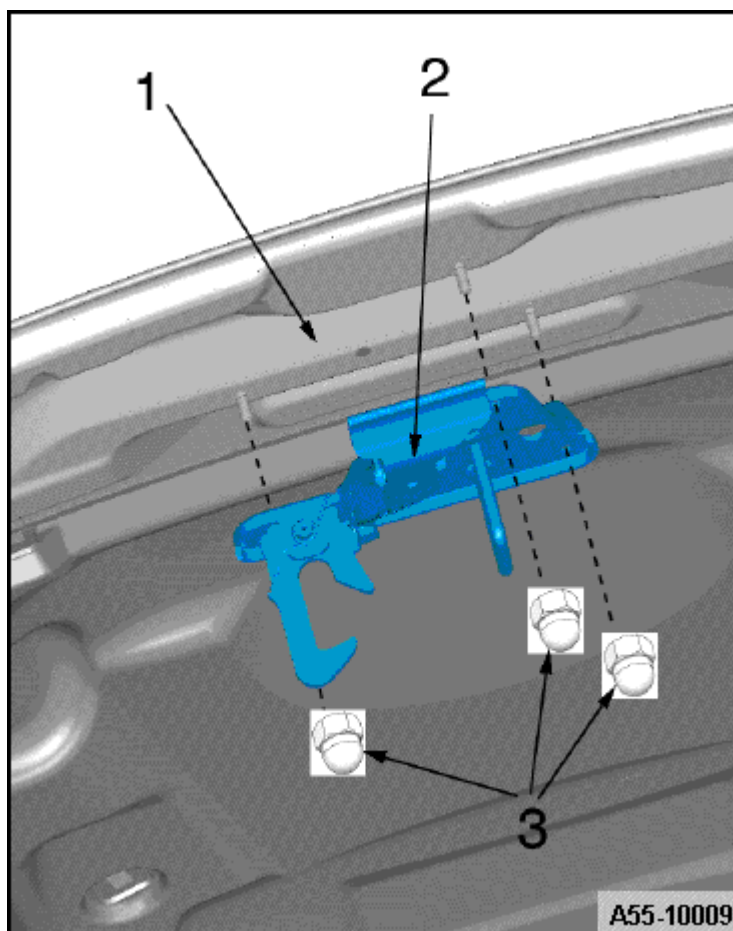

### Removing and installing bonnet lock (bottom section)

- Disengage Bowden cable for bonnet → [Chapter](#).
- Remove bolts -3- (4x).
- When installing, tighten to 14 Nm.
- Remove lower section of bonnet lock -2- from lock carrier -1-.
- To adjust height of bonnet, move lock (bottom section) up or down as required.

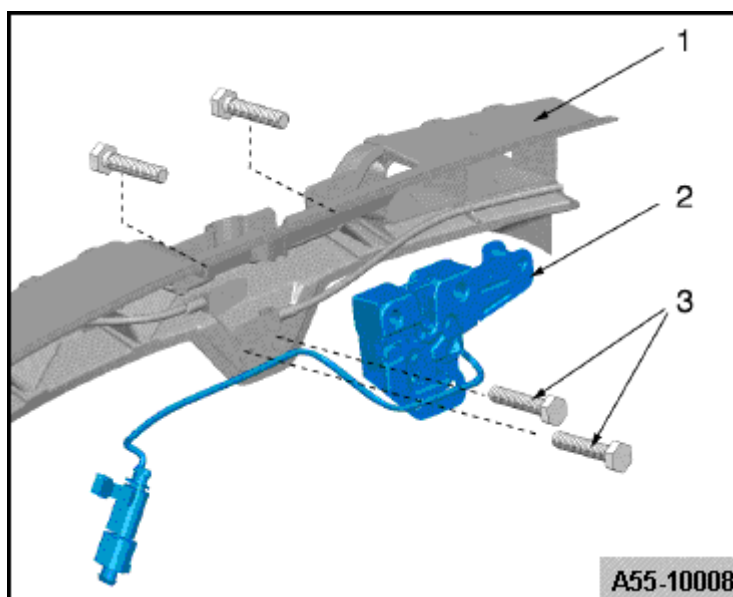

### Removing and installing gas strut

#### 1 - Gas strut

- Prop up and secure bonnet in open position.
- Use screwdriver to slightly

