

## Removing

- Switch off ignition.
- Remove plenum chamber cover.



### **WARNING**

***The two valves of the pump valve unit may be hot even if the engine is cold.***

- Remove wiper arms and scuttle panel trim → **Rep. Gr.92.**
- Remove dome brace if necessary (not fitted on all vehicles) → **Rep. Gr.40.**
- Remove upper cover of air intake unit → **Chapter.**
- Unplug connector -A- from temperature sensor -B-.
- Give temperature sensor -B- approx. 90° turn in direction of arrow and remove it from intake housing.

