

WI-XML

Tinklio puslapis 1 iš 2


Audi A4

Current Flow Diagram

No. 56 / 1
Edition 08.1997

Heated seats (without heated steering wheel)
From model year 1996

Fuse box:

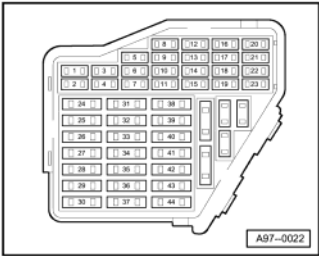

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.


Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red

Audi A4

Current Flow Diagram

No. 56 / 2

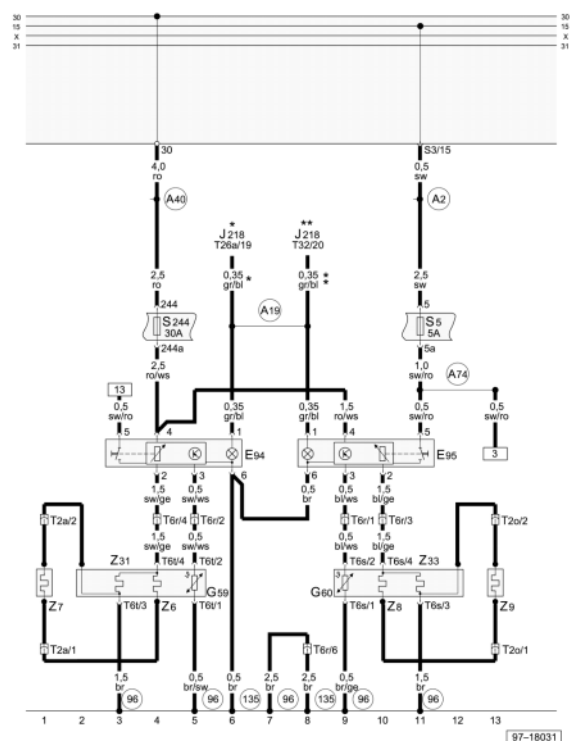

Heated seats (without heated steering wheel)

- E94 - Heated driver's seat adjuster
- E95 - Heated front passenger's seat adjuster
- G59 - Driver's seat temperature sensor
- G60 - Front passenger's seat temperature sensor
- J218 - Combi-processor in dash panel insert
- T2a - 2-pin connector, in driver's seat
- T2o - 2-pin connector, in front passenger's seat
- T6r - 6-pin connector, white, left connector point, A pillar
- T6s - 6-pin connector, green, under front passenger's seat
- T6t - 6-pin connector, green, under driver's seat
- T26a - 26-pin connector, blue, on dash panel insert
- T32 - 32-pin connector, blue, on dash panel insert
- Z6 - Heated driver's seat
- Z7 - Heated driver's seat backrest
- Z8 - Heated front passenger's seat
- Z9 - Heated front passenger's seat backrest
- Z31 - Seat lateral support heater, driver's seat
- Z33 - Seat lateral support heater, front passenger's seat
- 96 - Earth connection -1-, in seat heating wiring harness

ws = white
 sw = black
 ro = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 ge = yellow
 or = orange
 rs = pink

- 135 - Earth connection -2-, in dash panel wiring harness
- A2 - Positive (+) connection (15), in dash panel wiring harness
- A19 - Connection (58d), in dash panel wiring harness
- A40 - Positive (+) connection -1- (30), in dash panel wiring harness
- A74 - Positive (+) connection (15a, fuse 5), in dash panel wiring harness
- * - Applicable up 1997 model year
- ** - Applicable from model year 1998