

Audi A4


Current Flow Diagram

No. 33 / 1

Edition 05.2003

Heated front seats - with and without heated steering wheel

From model year 2001

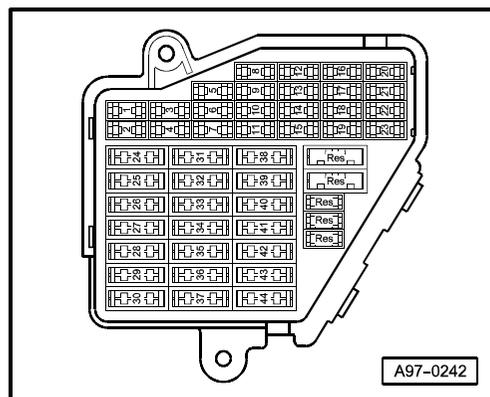Fuse box

◆ Dash panel, driver's side


Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7.5 A - brown
- 5 A - beige

**Note:**


From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

4-point relay carrier with screw connection

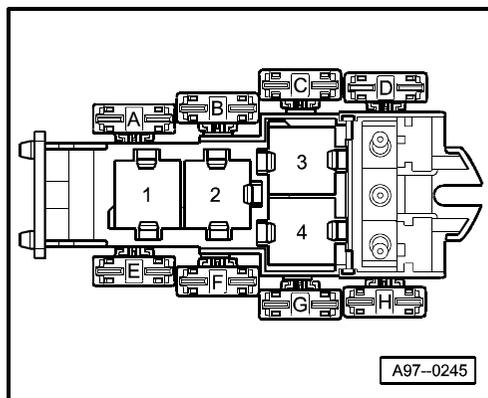


- ◆ Dash panel, driver's side

Connector point, seat wiring

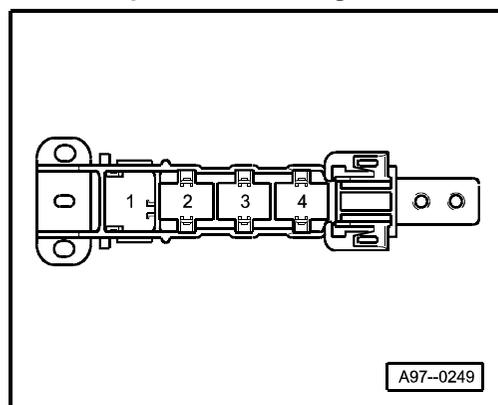

- ◆ Under front passenger's seat
3 - 6-pin connector, green (T6e)

Connector point, seat wiring

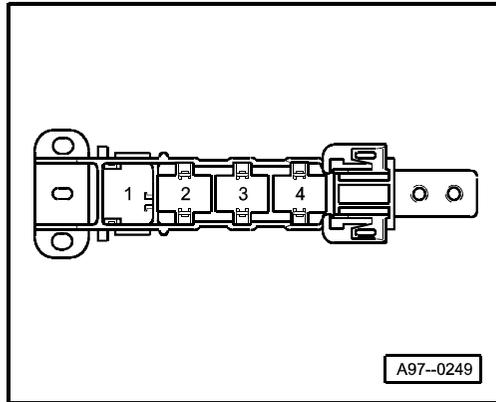


- ◆ Under driver's seat
3 - 6-pin connector, green (T6d)

Audi A4

Current Flow Diagram

No. 33 / 3

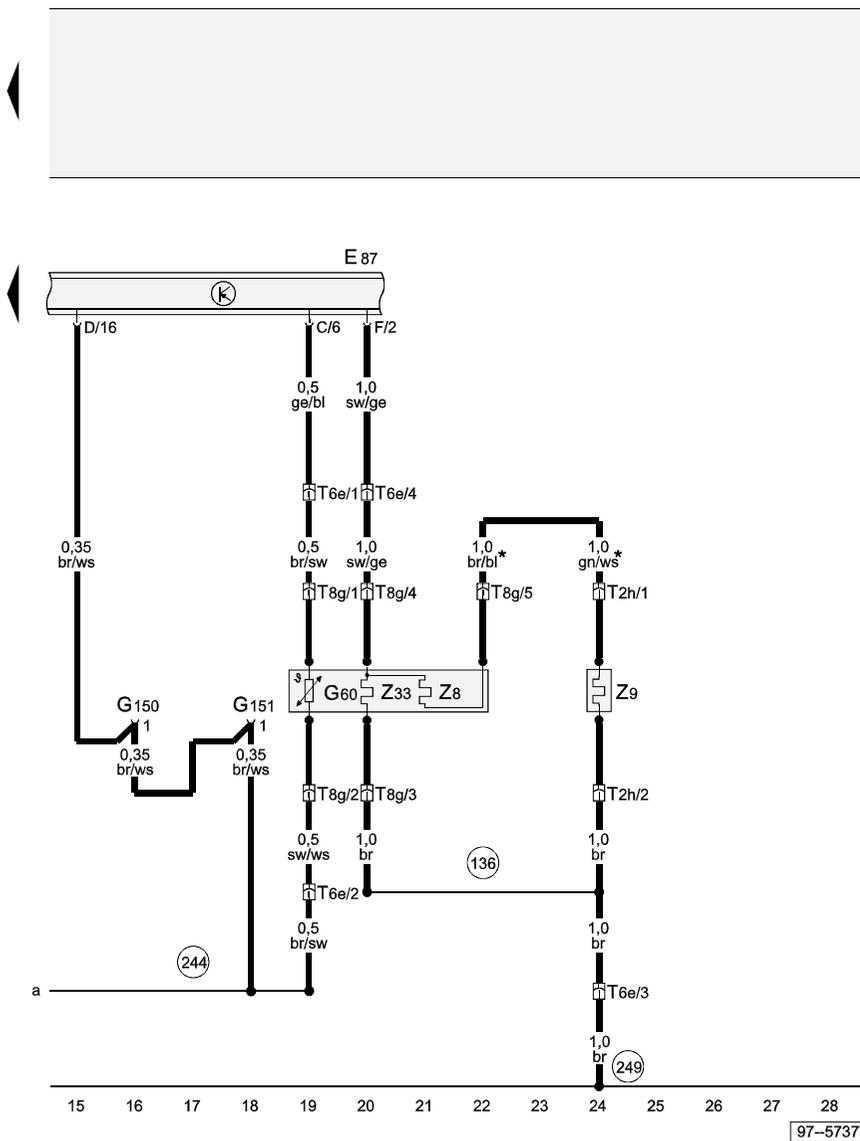

Heated front passenger's seat

- E87 - Control and display unit for air conditioner/Climatronic
- G60 - Front passenger's seat temperature sensor
- G150 - Left vent temperature sender
- G151 - Right vent temperature sender
- T2h - 2-pin connector, on front passenger's seat for heated backrest
- T6e - 6-pin connector, green, connector point, seat wiring, front passenger's seat
- T8g - 8-pin connector, on front passenger's seat for heated seat cushion
- Z8 - Heated front passenger's seat cushion
- Z9 - Heated front passenger's seat backrest
- Z33 - Front passenger's seat cushion lateral support heater
- 136 - Earth connection -2-, in seat heating wiring harness
- 244 - Earth connection (sender earth), in Climatronic wiring harness
- 249 - Earth connection -2-, in interior wiring harness
- * - Both possible



ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink