



## Removing and installing coolant temperature sender -G62-

### Removing


- Remove engine cover panel -arrows-.
- Engine cold.
- Open filler cap on coolant expansion tank briefly and allow residual pressure in cooling system to dissipate.

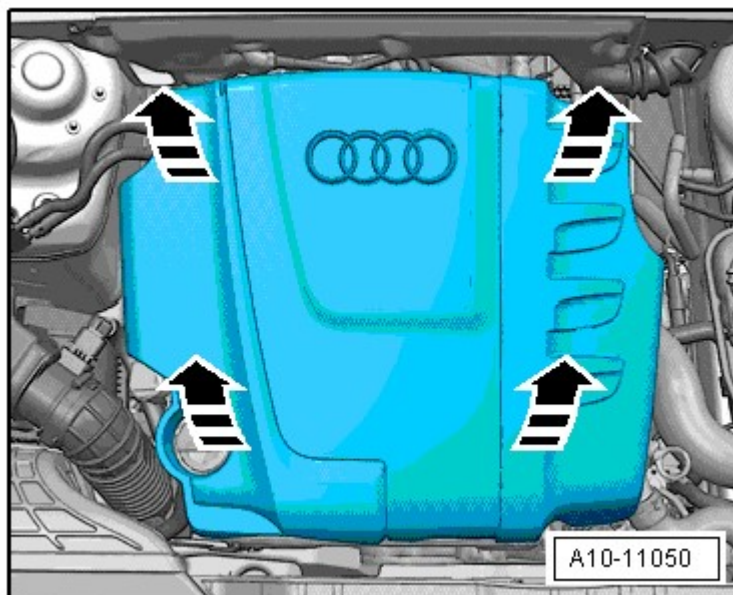

- Remove bolt -4- and unclip air hoses for exhaust gas pressure sensor 1.

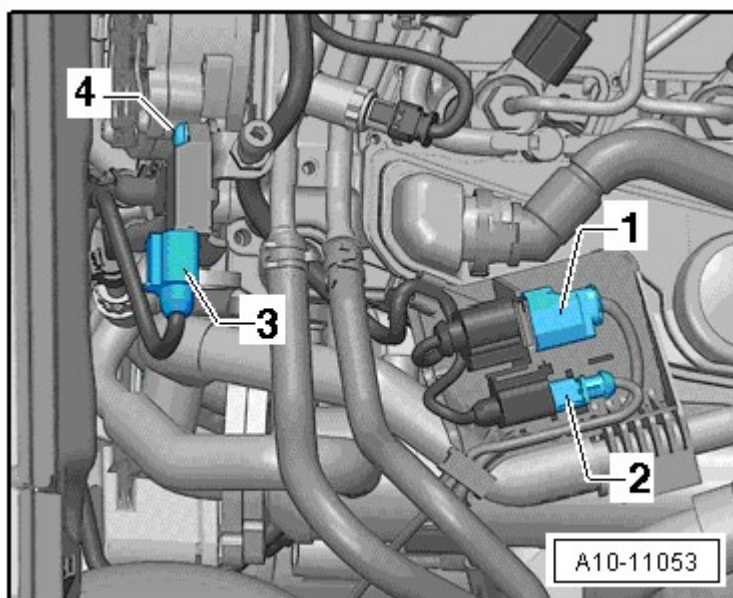

- Remove nuts -1- and detach bracket -2-.
- Remove vacuum pump → [Brake system; Rep. gr.47; Vacuum system; Removing and installing vacuum pump.](#)

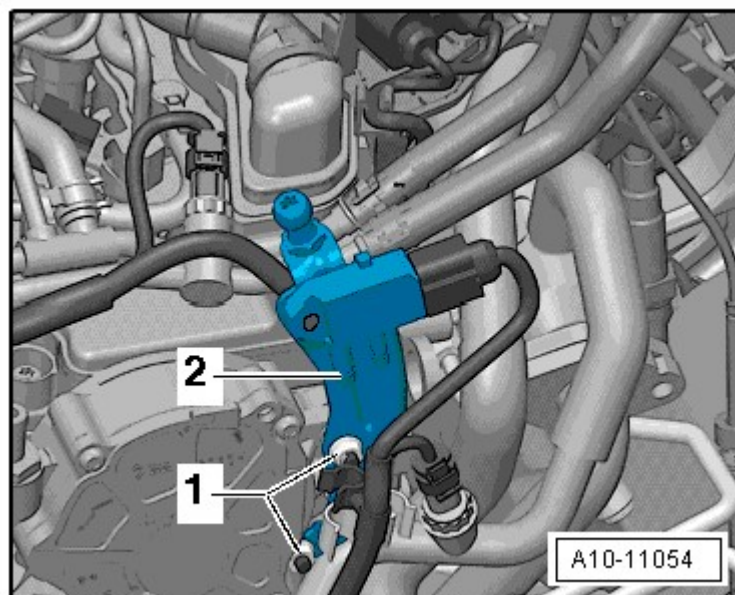

- Unplug electrical connector -2- at coolant temperature sender -G62-.
- Pull off retaining clip -1- and pull out coolant temperature sender -G62-.

### Installing

Install in reverse order. Note the following:



#### Note

- ♦ Renew O-rings.
- ♦ Insert new coolant temperature sender -G62- immediately into connection to avoid loss of coolant.
- Check coolant level → [Chapter](#).

