


Removing and installing radiator outlet coolant temperature sender -G83-

Removing

- Remove engine cover panel -arrows-.

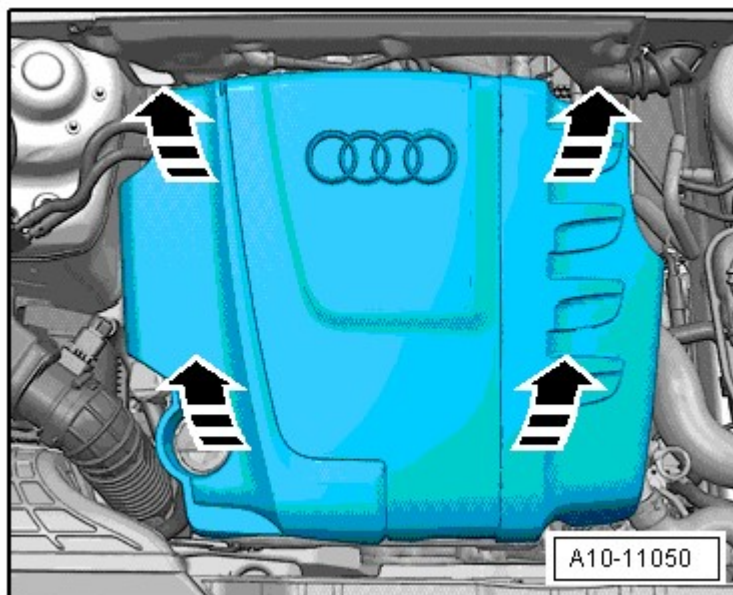


- Unplug electrical connector -1- and unscrew radiator outlet coolant temperature sender -G83--2-.



WARNING

Hot steam/hot coolant can escape - risk of scalding.

- ♦ **The cooling system is under pressure when the engine is hot.**
- ♦ **Cover filler cap on coolant expansion tank with a cloth and open carefully to dissipate pressure.**

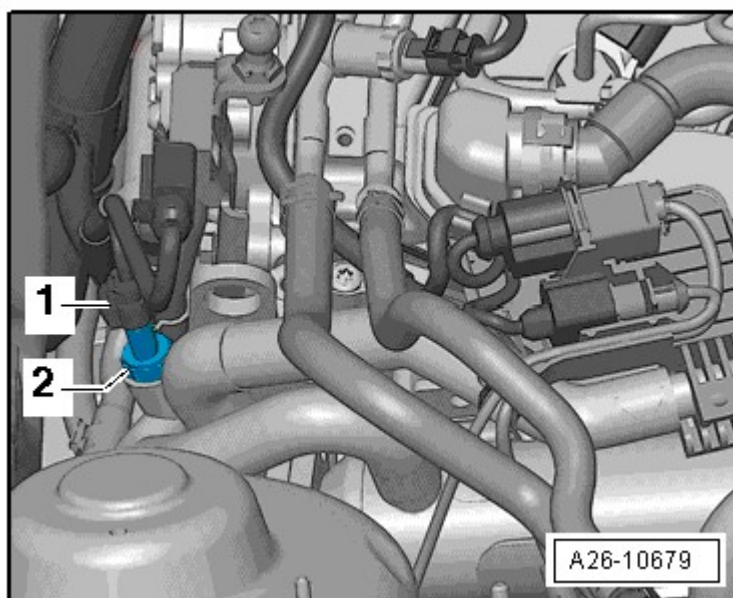

Installing

Install in reverse order. Note the following:

- Top up coolant.