

Audi A4

Current Flow Diagram


No. 6 / 1

Edition 06.1999

Headlight washer system


From model year 1998, ► 8D-X-200000

Fuse box:

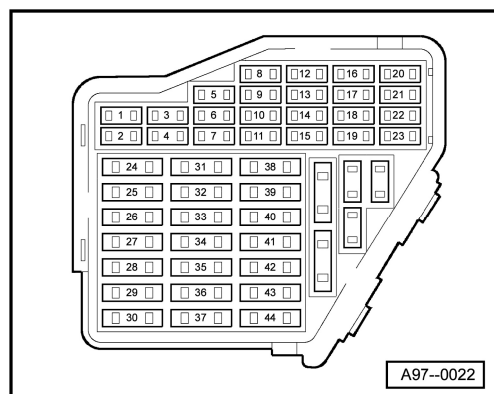

From fuse number 23 upwards the fuses in the fuse box are designated as 223 etc. in the Current Flow Diagram.

Micro-central electrics:

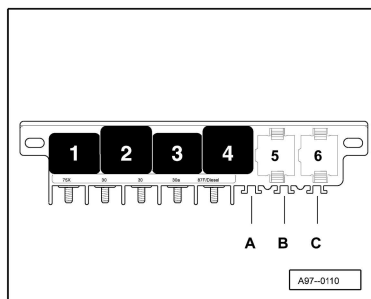

Position of relays:

- 5 - Automatic intermittent wash/wipe relay
- 6 - Automatic intermittent wash/wipe relay

Fuse colours


- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue

10 A - red

Audi A4

Current Flow Diagram

No. 6 / 2

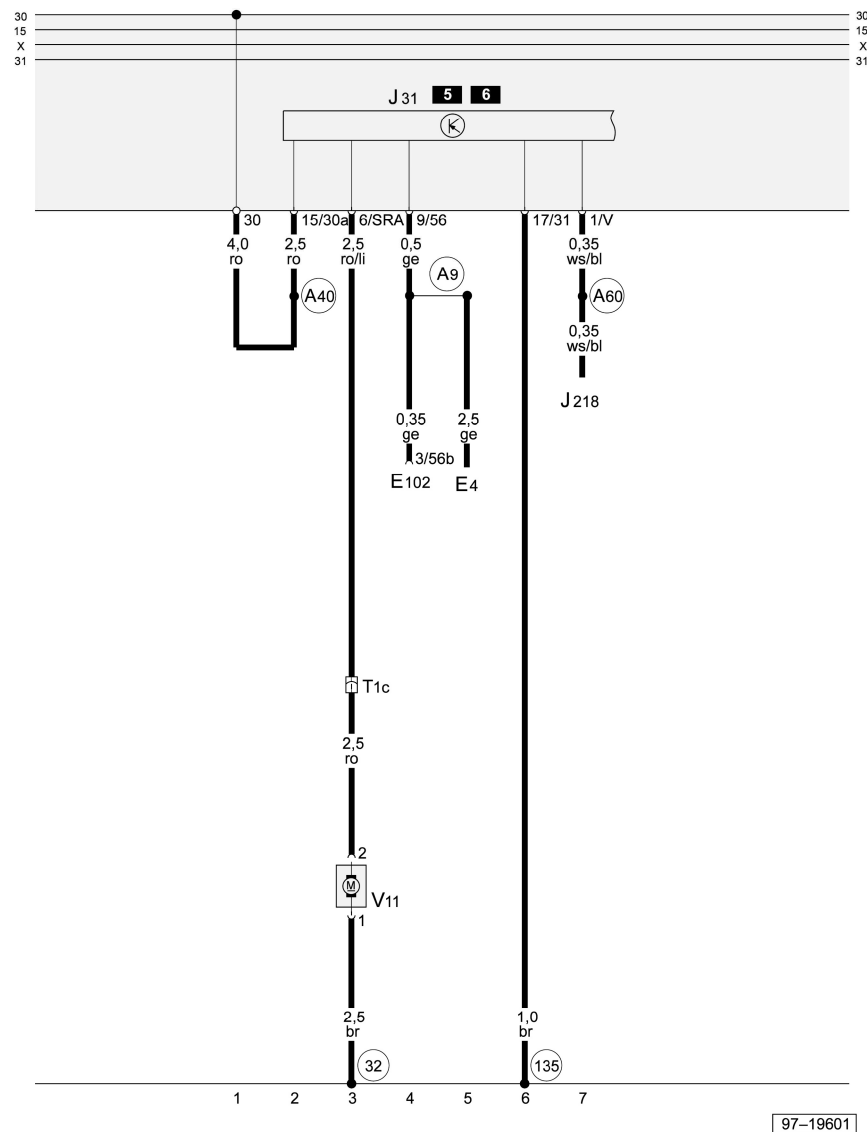

Headlight washer system

- E4 - Headlight dipper/flasher switch
- E102 - Headlight range control adjuster
- J31 - Automatic intermittent wash/wipe relay
- J218 - Combi-processor in dash panel insert
- T1c - 1-pin connector, brown, left connector point, A pillar
- V11 - Headlight washer system pump
- 32 - Earth point, behind dash panel, left
- 135 - Earth connection -2-, in dash panel wiring harness
- A9 - Positive (+) connection (56b), in dash panel wiring harness
- A40 - Positive (+) connection -1- (30), in dash panel wiring harness
- A60 - Connection (vehicle speed signal), in dash panel wiring harness

ws = white
sw = black
ro = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
ge = yellow
or = orange
rs = pink