


Front side

A - Connector for cruise control system

- 1 - Terminal 31
- 2 - Fix
- 3 - Distance
- 4 - Terminal 30

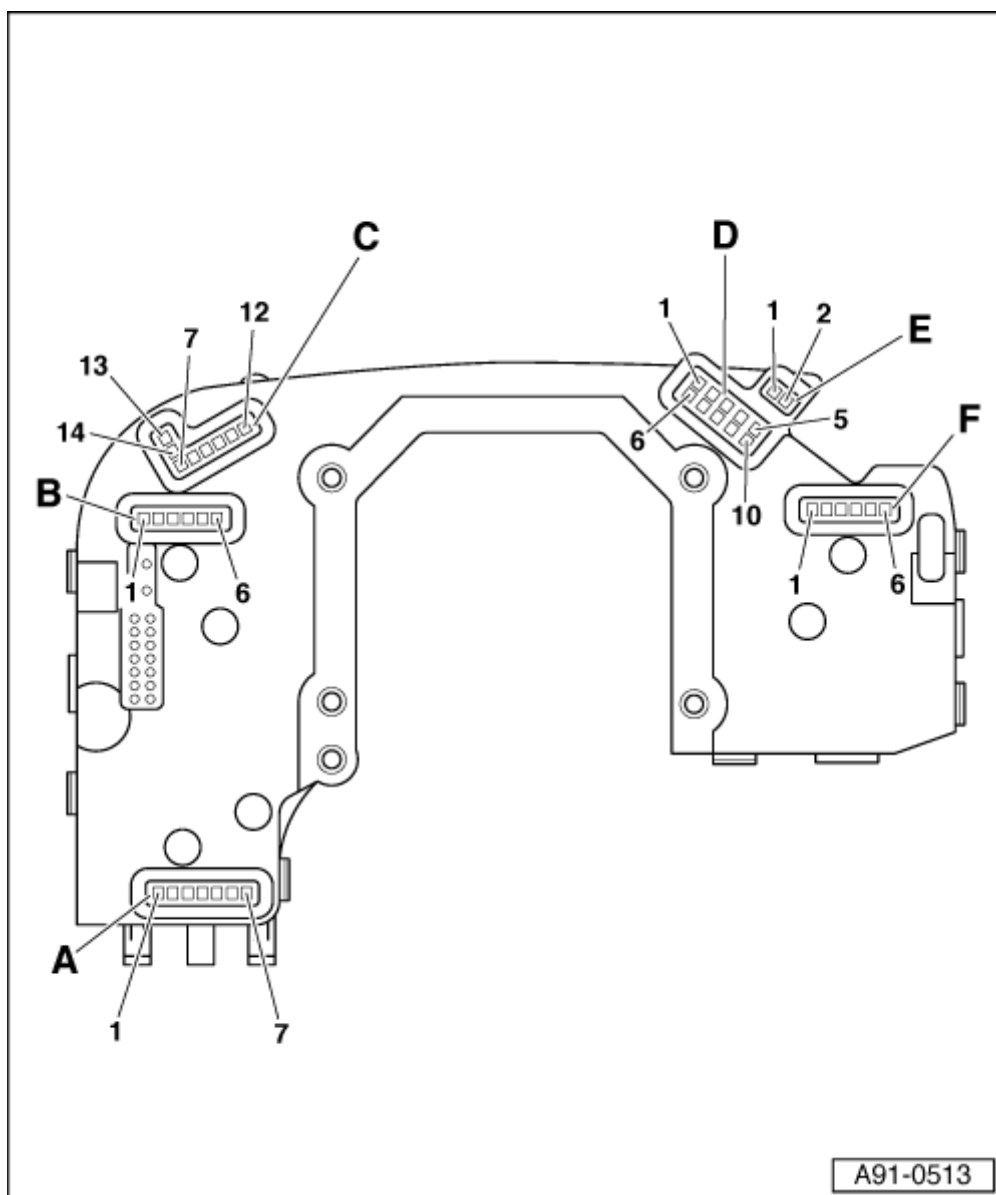

- 5 - Resume/touch function (Off)
- 6 - Acceleration/deceleration
- 7 - Locked (Off)

B - Connector for turn signal

- 1 - Terminal 31
- 2 - Radio telephone (special-purpose vehicles)
- 3 - Alarm (special-purpose vehicles)
- 5 - Headlight flasher/light control
- 6 - Turn signal indicators

C - Connector for multi-function steering wheel / tiptronic / heated steering wheel

- 7 - tiptronic (–)
- 8 - Multi-function steering wheel (terminal 30)
- 9 - Multi-function steering wheel (LIN data bus)

- 10 - Heater sensor/ tiptronic (+)
- 11 - Multi-function steering wheel dimmer
- 12 - Tiptronic earth
- 13 - Steering wheel heating (+)
- 14 - Steering wheel heating (–)

D - Steering angle sender -G85-

- 1 - Light barrier 5
- 2 - Light barrier 3
- 3 - Light barrier 1
- 4 - Terminal 30
- 5 - Voltage supply (5 V)
- 6 - Light barrier 6
- 7 - Light barrier 4
- 8 - Light barrier 2
- 9 - Terminal 31
- 10 - Light barrier 7

E - Horn -H1-

- 1 - Terminal 31
- 2 - Horn

F - Wiper system

- 1 - Terminal 31
- 2 - Intermittent wipe potentiometer
- 3 - On-board computer
- 5 - Wash
- 6 - Wipe